

Innovative Products


701 Osage Street, Unit 120, Denver, CO 80204 USA Phone 303.892.0400 Toll Free 800.333.4234 Fax 303.825.5988 EMail info@bisonip.com Web www.bisonip.com

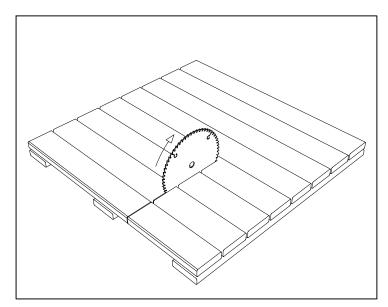


1. AFTER MEASURING, CUT THE TILE TO THE DESIRED SIZE WITH A HIGH QUALITY CARBIDE SAW BLADE. CUT FROM THE TOP AS SHOWN IF USING A HAND SAW OR TURN THE TILE OVER FOR A TABLE SAW.

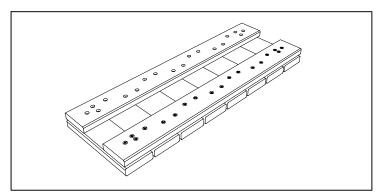

3. USING THE BOTTOM RUNNER REMOVED IN STEP 2
TO ALIGN THE HOLES, PRE-DRILL ACCORDINGLY
WITH A CARBIDE BIT ON THE PORTION TO BE
INSTALLED. BE SURE TO MAINTAIN A CONSISTENT
SPACING BETWEEN THE PLANKS.

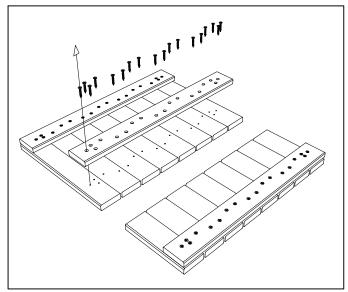

2. AFTER CUTTING, WITH THE TILE UPSIDE DOWN, REMOVE A BOTTOM RUNNER FROM THE PORTION TO BE DISCARDED, BEING CAREFUL TO NOT STRIP THE SCREW HEADS.

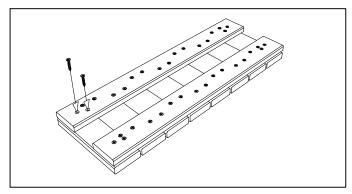

4. AFTER PRE-DRILLING, SCREW THE RUNNER INTO PLACE ON THE PORTION TO BE INSTALLED, RE-USING THE SCREWS REMOVED IN STEP 2.

GENERAL NOTES: APPLY TO ALL OF THE ABOVE PRODUCTS

- 1. INSTALLATION MUST BE COMPLETED IN ACCORDANCE WITH BISON INNOVATIVE PRODUCTS SPECIFICATIONS.
- 2. DRAWINGS NOT TO SCALE.
- 3. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.BisonIP.com



CUTTING WOOD TILES

CUTTING WOOD TILES IN THE FIELD TO FIT PERIMETER EDGES